LabWindows®/CVI
PID Control Toolkit
Reference Manual

October 1994 Edition

Part Number 320794A-01

© Copyright 1994 National Instruments Corporation.
All rights reserved.

National Instruments Corporate Headquarters
6504 Bridge Point Parkway
Austin, TX 78730-5039
(512) 794-0100
Technical support fax: (800) 328-2203
(512) 794-5678

Branch Offices:
Australia (03) 879 9422, Austria (0662) 435986, Belgium 02/757.00.20, Canada (Ontario) (519) 622-9310,
Canada (Québec) (514) 694-8521, Denmark 45 76 26 00, Finland (90) 527 2321, France (1) 48 14 24 24,
Germany 089/741 31 30, Italy 02/48301892, Japan (03) 3788-1921, Netherlands 03480-33466, Norway 32-848400,
Spain (91) 640 0085, Sweden 08-730 49 70, Switzerland 056/20 51 51, U.K. 0635 523545

Limited Warranty

The media on which you receive National Instruments software are warranted not to fail to execute programming instructions, due to defects in materials and workmanship, for a period of 90 days from date of shipment, as evidenced by receipts or other documentation. National Instruments will, at its option, repair or replace software media that do not execute programming instructions if National Instruments receives notice of such defects during the warranty period. National Instruments does not warrant that the operation of the software shall be uninterrupted or error free.

A Return Material Authorization (RMA) number must be obtained from the factory and clearly marked on the outside of the package before any equipment will be accepted for warranty work. National Instruments will pay the shipping costs of returning to the owner parts which are covered by warranty.

National Instruments believes that the information in this manual is accurate. The document has been carefully reviewed for technical accuracy. In the event that technical or typographical errors exist, National Instruments reserves the right to make changes to subsequent editions of this document without prior notice to holders of this edition. The reader should consult National Instruments if errors are suspected. In no event shall National Instruments be liable for any damages arising out of or related to this document or the information contained in it.

EXCEPT AS SPECIFIED HEREIN, NATIONAL INSTRUMENTS MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND SPECIFICALLY DISCLAIMS ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. CUSTOMER'S RIGHT TO RECOVER DAMAGES CAUSED BY FAULT OR NEGLIGENCE ON THE PART OF NATIONAL INSTRUMENTS SHALL BE LIMITED TO THE AMOUNT THERETOFORE PAID BY THE CUSTOMER. NATIONAL INSTRUMENTS WILL NOT BE LIABLE FOR DAMAGES RESULTING FROM LOSS OF DATA, PROFITS, USE OF PRODUCTS, OR INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF. This limitation of the liability of National Instruments will apply regardless of the form of action, whether in contract or tort, including negligence. Any action against National Instruments must be brought within one year after the cause of action accrues. National Instruments shall not be liable for any delay in performance due to causes beyond its reasonable control. The warranty provided herein does not cover damages, defects, malfunctions, or service failures caused by owner's failure to follow the National Instruments installation, operation, or maintenance instructions; owner's modification of the product; owner's abuse, misuse, or negligent acts; and power failure or surges, fire, flood, accident, actions of third parties, or other events outside reasonable control.

Copyright

Under the copyright laws, this publication may not be reproduced or transmitted in any form, electronic or mechanical, including photocopying, recording, storing in an information retrieval system, or translating, in whole or in part, without the prior written consent of National Instruments Corporation.

Trademarks

NI-DAQ® is a trademark of National Instruments Corporation.

Product and company names listed are trademarks or trade names of their respective companies.

WARNING REGARDING MEDICAL AND CLINICAL USE OF NATIONAL INSTRUMENTS PRODUCTS

National Instruments products are not designed with components and testing intended to ensure a level of reliability suitable for use in treatment and diagnosis of humans. Applications of National Instruments products involving medical or clinical treatment can create a potential for accidental injury caused by product failure, or by errors on the part of the user or application designer. Any use or application of National Instruments products for or involving medical or clinical treatment must be performed by properly trained and qualified medical personnel, and all traditional medical safeguards, equipment, and procedures that are appropriate in the particular situation to prevent serious injury or death should always continue to be used when National Instruments products are being used. National Instruments products are NOT intended to be a substitute for any form of established process, procedure, or equipment used to monitor or safeguard human health and safety in medical or clinical treatment.

Contents

About This Manual vii
Organization of This Manual vii
Conventions Used in This Manual vii
Related Documents viii
Customer Communication ix

Chapter 1
PID Control Toolkit Overview 1-1
Installing the LabWindows/CVI PID Control Toolkit 1-1
Windows 1-1
SPARCstation 1-2
Product Overview 1-2
The PID Control Toolkit Function Panels 1-3
Designing a Control Strategy 1-4
Scaling I/O Values 1-5
Setting Up Timing 1-6
Tuning Your Controller 1-6
Closed-Loop (Ultimate Gain) Tuning Procedure 1-6
Open-Loop (Step Test) Tuning Procedure 1-7
General Description of the PID Functions 1-9
Particulars of the PID Algorithm 1-10
Example Programs 1-12
PIDDEMO 1-12
PIDDAQ 1-13
LDLGDEMO 1-13
RAMPDEMO 1-14

Chapter 2
PID Control Function Reference 2-1
pid_config 2-1
pid_cycle 2-2
pid_e2_cycle 2-3
pid_ext_cycle 2-4
pid_ld_lg_cycle 2-5
pid_ld_lg_tune 2-5
pid_manualset 2-6
pid_mode 2-6
pid_ramp 2-7
pid_setpoint 2-8
pid_tune 2-8

Appendix A
Customer Communication Appendix-1

Glossary Glossary-1

Figures

Figure 1-1. Control Flowchart 1-4
Figure 1-2. Output and Process Variable Strip Chart 1-8
Figure 1-3. Front Panel of the Tank Level PID Demo 1-12
Figure 1-4. Front Panel of the Resistor-Capacitor Network Example 1-13
Figure 1-5. Front Panel of the Lead-Lag Demo 1-14
Figure 1-6. Front Panel of the Ramp Demo 1-14

Tables

Table 1-1. The PID Toolkit Function Tree 1-3
Table 1-2. Closed-Loop Quarter-Decay Ratio Values 1-7
Table 1-3. Open-Loop Quarter-Decay Ratio Values 1-9
Table 1-4. PID Algorithm Variables 1-10

About This Manual

The *LabWindows/CVI PID Control Toolkit Reference Manual* is a reference guide to the LabWindows/CVI PID control instrument driver and examples. It assumes you have a basic understanding of process control strategies and algorithms. If you are not familiar with process control terminology, methods, and standards, see the *Related Documents* section in *About This Manual* for other sources of information.

Organization of This Manual

This manual is organized as follows:

- This chapter contains the following information about the Proportional-Integral-Derivative (PID) Control toolkit.
  - how to install the PID Control toolkit on your computer
  - product overview
  - how to design a control strategy
  - general information about the PID Control functions
  - introduction to the example programs
- Chapter 2, *PID Control Function Reference*, contains a brief explanation of each of the functions in the LabWindows/CVI PID Control Toolkit.
- Appendix A, *Customer Communication*, contains forms you can use to request help from National Instruments and to comment on our products and manuals.
- The *Glossary* contains an alphabetical list and description of terms used in this manual, including abbreviations, acronyms, metric prefixes, mnemonics, and symbols.

Conventions Used in This Manual

The following conventions are used in this manual:

bold	Bold text denotes parameters, or the introduction of menu or function panel items.
italic	Italic text denotes emphasis, a cross reference, or an introduction to a key concept.
`monospace`	Text in this font denotes text or characters that you should literally input from the keyboard, sections of code, programming examples, and syntax examples. This font is also used for the proper names of disk drives, paths, directories, programs, subprograms, subroutines, device names,

	functions, variables, filenames, and extensions, and for statements and comments taken from program code.
italic monospace	Italic text in this font denotes that you must supply the appropriate word or value in the place of these terms, for example, *filename*.
<Ctrl>	Key names in the text match the names on the computer keyboard, and they are surrounded by angled brackets. For example, the Control key appears in the text as <Ctrl>.
-	A hyphen between two or more key names denotes that you should simultaneously press the named keys, for example, <Ctrl-Alt-Del>.

Abbreviations, acronyms, metric prefixes, mnemonics, symbols, and terms are listed in the *Glossary*.

Related Documents

The following documentation available from National Instruments contains information that you may find helpful as you read this manual.

- *Getting Started with LabWindows/CVI*
- *LabWindows/CVI User Manual*
- *LabWindows/CVI Standard Libraries Reference Manual*
- *LabWindows/CVI Instrument Library Developer's Guide*
- *NI-DAQ Software Reference Manual for DOS/LabWindows*
- *NI-DAQ Function Reference Manual*

The following documentation also contains information that you may find helpful as you read this manual:

- Corripio, A.B. *Tuning of Industrial Control Systems.* Raleigh, North Carolina: ISA, 1990. ISBN 1-55617-233-8.
- Shinskey, F.G. *Process Control Systems.* New York: McGraw-Hill, 1988. ISBN 0-07-056903-7.

The Instrument Society of America (ISA), the organization that sets standards for process control instrumentation in the United States, offers a catalog of books, journals, and training materials to teach you the basics of process control programming. One course in particular is very helpful—*Single and Multiloop Control Strategies*, course number T510. For information, contact the ISA at its Raleigh, North Carolina, headquarters at (919) 549-8411.

Tuning of Industrial Control Systems is an ISA Independent Learning Module book. It is organized as a self-study course covering measurement and control techniques, selection of controllers, and advanced control techniques. Tuning procedures are detailed and yet easily understandable. *Process Control Systems* is an outstanding general text covering the application, design, and tuning of all common control strategies. It contains all of the basic algorithms used in the LabWindows/CVI PID Control Toolkit process control functions.

Customer Communication

National Instruments wants to receive your comments on our products and manuals. We are interested in the applications you develop with our products, and we want to help if you have problems with them. To make it easy for you to contact us, this manual contains comment and configuration forms for you to complete. These forms are in Appendix A, *Customer Communication*, at the end of this manual.

Chapter 1
PID Control Toolkit Overview

This chapter contains the following information about the Proportional-Integral-Derivative (PID) Control toolkit.

- how to install the PID Control toolkit on your computer
- product overview
- how to design a control strategy
- general information about the PID Control functions
- introduction to the example programs

Installing the LabWindows/CVI PID Control Toolkit

The following sections contain instructions for installing the PID Control toolkit on the Windows and Sun SPARCstation platforms.

The LabWindows/CVI PID Control Toolkit comes in compressed form on a floppy disk. Installing the PID Control toolkit requires approximately 1.2 MB.

Some virus detection programs may interfere with the installer program. Check the distribution disks for viruses before you begin installation. Then turn off the automatic virus checker and run the installer. After installation it is good practice to check your hard disk for viruses again, then turn on the virus checker.

Windows

You can install the PID Control toolkit from the Windows File Manager or with the **Run...** command from the **File** menu of the Program Manager.

Insert the PID Control Toolkit disk into the 3.5-inch disk drive and run the `SETUP.EXE` program using one of the following methods.

- Under Windows, launch the File Manager. Click on the drive icon that contains the installation disk. Find `SETUP.EXE` in the list of files on that disk and double-click on it.
- Under Windows, select **Run...** from the **File** menu of the Program Manager. A dialog box appears. Type *X*`:\SETUP` (where *X* is the proper drive designation).

After you choose an installation option, follow the instructions that appear on the screen.

SPARCstation

You can install the PID Control toolkit as shown in the following steps. You do not need root privileges to install the PID Control toolkit, but you must be able to write to the LabWindows/CVI directory where you will install the PID Control toolkit.

1. Insert the first disk into the 3.5-inch disk drive.
2. Type the following UNIX command: `tar xvf /dev/rfd0a INSTALL`
3. Run the installation program by typing the following command: `./INSTALL`
4. Follow the instructions on screen.

Product Overview

The PID Control toolkit adds sophisticated control algorithms to LabWindows/CVI. All algorithms are implemented in LabWindows/CVI instrument functions, so you have the source code to modify for your own application. The toolkit includes programming functions for PID control loops. It uses conventional, external reset feedback, and error squared PID algorithms.

To obtain the source code for the toolkit, perform the following steps.

1. Select **Load…** from the **Instruments** menu. The Load Instrument dialog box appears.
2. Select `pid.fp` in the list box within the dialog box.
3. Select **Edit** from the **Instruments** menu. The Edit Instrument dialog box appears.
4. Highlight `PID Control` and click on the **Attach and Edit Source** button.

The PID Control Toolkit Function Panels

The PID Control Toolkit function panels are grouped in a tree structure according to the types of operations performed. The PID Control Toolkit function tree is shown in Table 1-1.

Table 1-1. The PID Control Toolkit Function Tree

PID Control	
Configure	***pid_config***
Setpoint	***pid_setpoint***
Tune	***pid_tune***
Mode	***pid_mode***
Manual Set	***pid_manualset***
Cycle	
Conventional Cycle	***pid_cycle***
Error Squared Cycle	***pid_e2_cycle***
External Fdbk Cycle	***pid_ext_cycle***
Lead Lag	
Lead Lag Tune	***pid_ld_lg_tune***
Lead Lag Cycle	***pid_ld_lg_cycle***
Ramp	***pid_ramp***

PID Control is a set of functions for implementing PID control in LabWindows/CVI.

- `pid_config` sets up initial tuning parameters, mode, and derivative gain limit.
- `pid_setpoint` sends a new setpoint to a control loop.
- `pid_tune` specifies new tuning parameters (proportional band, reset time, rate time).
- `pid_mode` selects the operating mode (auto or manual) for a control loop.
- `pid_manualset` adjusts the output value directly (applies to manual mode only). The setting is a relative value, in other words, an offset from the output at the time the controller was placed in manual mode.
- **Cycle** represents the class of PID cycle functions that are called repeatedly to perform the PID computations and create a new output value, given the value of the process variable.
  - `pid_cycle` calculates an analog output value based on the current value of the process variable (**PV**) and setpoint using a PID algorithm.
  - `pid_e2_cycle` calculates an analog output value with a nonlinear proportional-error response based on the current value of **PV** and setpoint using a PID algorithm.

  - `pid_ext_cycle` calculates an analog output value with a nonlinear proportional-error response based on the current value of **PV**, setpoint, and reset feedback using a PID algorithm.

- **Lead Lag** represents the class of PID cycle functions for calculating the dynamic compensator in feedforward control schemes.

  - `pid_ld_lg_tune` specifies new Lead-Lag tuning parameters (gain, lag time, and lead time).

  - `pid_ld_lg_cycle` calculates the dynamic compensator in feedforward control schemes.

- `pid_ramp` generates a setpoint ramp.

Designing a Control Strategy

The first step in designing a control strategy is to sketch a flowchart of your process showing control elements (for example, valves) and measurements. Add feedback and any required computations, as textbooks on the subject of process control recommend. Then translate the diagram into a C program using the PID Control functions. An example of a diagram is shown in Figure 1-1, followed by the corresponding code fragment.

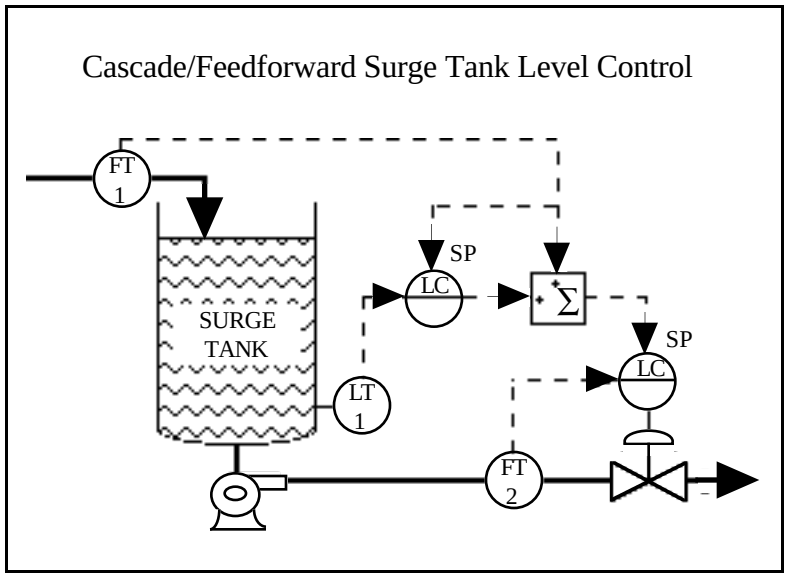

Figure 1-1. Control Flowchart

After configuring both control loops using pid_config, the following loop would be used to control the tank level process.

```
while (running)
{
   /* Hardware specific function to read the in-flow from FT1 */
   inflow = read_FT1();

   /* The in-flow serves as the setpoint for the first PID */
   pid_setpoint (LOOP1, inflow);

   /* Hardware specific function to read the tank level from LT1 */
   level = read_LT1();

   /* The tank level is the process variable for the first PID */
   mv = pid_cycle (LOOP1, level);

   /* The manipulated variable from the first PID combines with
   the input flow to form the setpoint for the second PID    */
   pid_setpoint (LOOP2, inflow + mv);

   /* Hardware specific function to read the output flow from FT2 */
   outflow = read_FT2();

   /* Determine the new valve position using the output flow
   read from FT2 as the process variable for the second PID */
   valve_position = pid_cycle (LOOP2, outflow);

   /* Hardware specific function to update the valve position */
   update_valve(valve_position);
}
```

You handle the inputs and outputs through data acquisition boards, GPIB instruments, or serial I/O ports. All functions in this package use a consistent amplitude scaling of zero to 100 percent. You can also adjust polling rates in real time. These rates are limited only by the hardware you use and the graphic complexity of your user interface.

Scaling I/O Values

All the functions in this package use inputs and outputs scaled as percentages. This makes control calculations simpler and return values more understandable. You must be sure to properly scale your physical measurements and outputs, however.

For example, you can use a National Instruments data acquisition board to acquire a 4 to 20 mA signal with a 250 Ω sampling resistor, giving a voltage of 1 to 5 V. To convert voltage data to percentages, you need to subtract 1.0 V and then multiply by 25 to scale the signal to a percentage.

When calculating controller gain (proportional band), you can easily scale your physical measurement to percentage of span. The span is defined as the difference between the maximum and minimum measurements.

For example, consider a temperature transmitter scaled from -100 to 1,200 C. Its span is 1,300 C. A controller proportional band of 10 percent means an input error of 130 C relative to the setpoint is just enough to drive the controller output to saturation.

Setting Up Timing

There are two ways to supply timing information to PID routines: through the `cycle_time` parameter or through a built-in time keeper. If `cycle_time` is less than or equal to zero, then each time the function is called, `cycle_time` measures the time since the last call and uses that time in its calculations. For most situations the given function is called from within a loop which uses `Timer` or some similar function that passes `cycle_time` as -1. This results in fairly regular timing, and the internal time keeper compensates for variations that occur. There is one limitation to this scheme. Timer resolution is limited to 55 ms under Windows. On Sun workstations, timer resolution is 10 ms for machines operating under Solaris 1 and 1 ms for machines operation under Solaris 2. For this reason, the functions should not be called faster than 5 or 10 Hz when cycle time is less than or equal to zero.

If `cycle_time` is a positive value (in seconds), the function uses this value in the calculations, regardless of the elapsed time. This method works for any interval and should be used for fast loops such as when the acquisition hardware is already doing the timing.

According to control theory, a sampled control system must run about 10 times faster than the fastest time constant in the plant under control. For instance, a temperature control loop is probably quite slow—a time constant of 60 s is common in a small system. In this case, a loop iteration time of about 6 s is sufficient. Faster cycling does not improve performance. The self-study course *Tuning of Industrial Control Systems*, mentioned in *About This Manual*, contains more information on this topic.

Tuning Your Controller

The two controller tuning procedures described in the following sections derive from the work of Ziegler and Nichols, who developed Quarter-Decay Ratio tuning techniques from a combination of theory and empirical observations. Experiment with these techniques in your process or using one of the example programs included with this instrument driver. Depending on the process, one tuning method may be easier or more accurate than the other. There are also techniques you can use with online controllers that cannot withstand the gross upsets described here. The ISA documents cited in the *Related Documentation* section of *About This Manual* give more information on this topic.

To perform these tests with LabWindows/CVI, set up your control strategy with the process variable (**PV**), **setpoint**, and **output** displayed on a large strip chart with the axes showing percentage versus time. Then perturb the loop as described in the *Closed-Loop (Ultimate Gain) Tuning Procedure* and *Open-Loop (Step Test) Tuning Procedure* sections of this chapter, and determine the response from the graph.

Closed-Loop (Ultimate Gain) Tuning Procedure

The closed-loop (ultimate gain) tuning procedure is very accurate, but requires that you put your process in steady-state oscillation. You must observe the process variable on a strip chart. To perform the closed-loop tuning procedure, complete the following steps.

1. Use `pid_time` to set both the **rate** and **reset** on your PID controller to zero.

2. With the controller in automatic mode, carefully reduce the proportional band (**PropBand**) in small steps using `pid_tune`. Disturb the loop after each step by making a small change in **setpoint** using `pid_setpoint`. The process variable should start oscillating as you reduce the **PropBand**. Keep making changes until the oscillation is perfectly sustained, neither growing nor decaying over time.

3. Record the controller proportional band as PB_u in percent.

4. Record the period of the oscillation as T_u in minutes.

5. Multiply the measured values by the factors shown in Table 1-2, and enter the new tuning parameters into your controller. This table gives the proper values for a quarter-decay ratio. If you want less overshoot, increase the PB, which has the same effect as reducing the gain.

Table 1-2. Closed-Loop Quarter-Decay Ratio Values

Controller	PB (percent)	reset (minutes)	rate (minutes)
P	2.00 PB_u	—	—
PI	2.22 PB_u	0.83 T_u	—
PID	1.67 PB_u	0.50 T_u	0.125 T_u

The self-study course *Tuning of Industrial Control Systems*, mentioned in *About This Manual*, contains more information on this topic.

Open-Loop (Step Test) Tuning Procedure

The open-loop (step test) tuning procedure is based on the assumption that you can model any process as a first-order lag and a pure dead time. This method requires more analysis than the closed-loop tuning procedure, but your process does not need to reach sustained oscillation. Therefore, the open-loop tuning procedure is probably quicker and less hazardous for many processes. You must display the output and the process variable (**PV**) on a strip chart that shows time on the X axis.

To perform the open-loop tuning procedure, complete the following four steps.

1. Put the controller in manual mode using `pid_config`, set the output to a nominal operating value using `pid_manualset`, and let **PV** settle completely. Record the **PV** and output values.

2. Make a step change in the output. Record the new output value.

3. Wait for **PV** to settle. From the chart, determine the values as derived from the sample displayed in Figure 1-2. The values are as follows.

   - Td — Dead time in minutes
   - T — Time constant in minutes
   - K — Process gain = $\frac{\text{percent change in output}}{\text{percent change in PV}}$

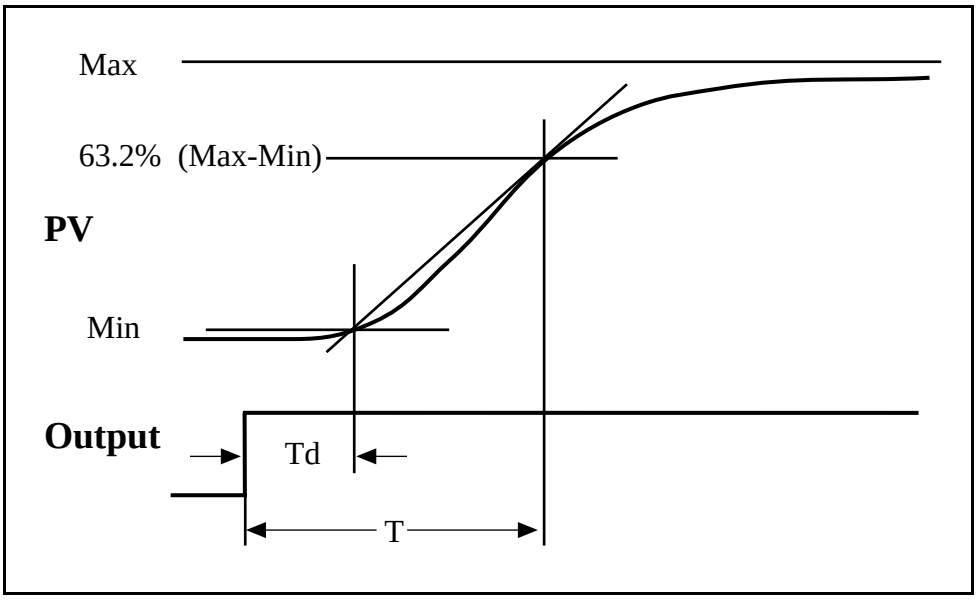

Figure 1-2. Output and Process Variable Strip Chart

To calculate the percent change in **PV**, you need to know the transmitter span. See the *Scaling I/O Values* section of this chapter for information on calculating the transmitter span. For example, the span of a temperature transmitter scaled from -100 to 900 C is 1,000 C. If the starting temperature is 200 and the final value is 400, the percent change is as follows.

50% - 30% = 20%

If the controller output was stepped with increments of 10 percent, the process gain is as follows.

$K = \frac{10\%}{20\%} = 0.5$

4. Multiply the measured values by the factors shown in Table 1-3, and enter the new tuning parameters into your controller. This table gives the proper values for a quarter-decay ratio. If you want less overshoot, increase the PB, which has the same effect as reducing the gain.

Table 1-3. Open-Loop Quarter-Decay Ratio Values

Controller	PB (percent)	reset (minutes)	rate (minutes)
P	$100 \frac{KT_d}{T}$	—	—
PI	$110 \frac{KT_d}{T}$	$3.33 T_d$	—
PID	$80 \frac{KT_d}{T}$	$2.00 T_d$	$0.50 T_d$

The self-study course *Tuning of Industrial Control Systems*, mentioned in *About This Manual*, contains more information on this topic.

General Description of the PID Functions

The PID functions use an interacting positional PID algorithm. Rate action is affected by the process variable only. The functions include anti-reset windup and bumpless auto/manual transfer. The book *Process Control Systems*, mentioned in *About This Manual*, contains more information on this topic.

The functions express **setpoint**, **process variable**, and **output** in percent. Reverse action (also called increase-decrease) is the default controller mode, in which the output decreases if **process variable** is greater than **setpoint**. **proportional band** is a percentage value. The equation for controller **gain** is therefore as follows.

$$G = \frac{100}{PB}$$

The functions measure **reset** and **rate** in minutes.

Switching to manual mode freezes the output at the current value. In manual mode, you can then increase or decrease the output by changing the manual input. All transitions, from auto to manual and from manual to auto, are bumpless, as a result of a bias tracking technique. The book *Process Control Systems*, mentioned in *About This Manual*, contains more information on this topic.

You should call these functions from inside a while loop with a fixed iteration time. The LabWindows/CVI PID Control toolkit can accommodate a fixed number of control loops running at the same time. Each function in the library takes a control loop selector as a parameter. Currently the number of loops is set at 5 (loop selectors 0-4). This number is arbitrary, and you can change it by modifying the constant `NLOOPS` and resaving the instrument driver.

Two modifications of the conventional PID cycle are available in the PID Control toolkit. The Error Squared Cycle performs conventional PID, except that its proportional error response is nonlinear. For some processes, increasing the controller gain as the error magnitude increases improves response time and damping. The book *Process Control Systems*, mentioned in *About*

This Manual, contains more information on this topic. The PID External Reset Feedback Cycle derives the input for reset (integral) calculation from an external source. Normally, this input is the previous controller output value. More complex control schemes, such as a selector (limit) control in which the offline controller tends to wind up, need this connection.

Particulars of the PID Algorithm

Table 1-4 shows the variables used by the PID algorithms that the process control functions implement.

Table 1-4. PID Algorithm Variables

Variable	Description
P	Proportional band in percent (a negative value indicates forward action)
I	Integral (reset) in minutes per reset
D	Derivative (rate) in minutes per repeat
K_d	Derivative gain limit (always > 1; values of 10 to 20 are normal)
PV	Process variable in percent
SP	Setpoint in percent
m	Manipulated variable (output of controller) in percent
m_h	High limit for manipulated variable in percent
m_l	Low limit for manipulated variable in percent
M	Manipulated variable in manual mode in percent
e	Error (difference between setpoint and process variable) in percent
b	Bias in percent
y	Output of derivative filter in percent
f	Feedback signal for the integral term in percent
L	Linearity parameter for the error-squared controller
Δt	Cycle time of the algorithm in minutes

The book *Process Control Systems*, mentioned in *About This Manual*, contains more information on this topic.

The PID Control toolkit implements the equations in source code, so you can modify them if necessary. The functions execute the equations in the following order.

1. Derivative filter:

$$y = y + \Delta t\left(\frac{(PV - y)}{\Delta t + \frac{D}{K_d}}\right)$$

2. Proportional algorithm:

$$m = b + \left(\frac{100}{P}\right)\left(SP - PV - K_d(PV - y)\right)$$

3. Output limiting:

   if $m > m_h$ then $m = m_h$

   if $m < m_l$ then $m = m_l$

4. Integral action:

$$b = b + \Delta t\left(\frac{f - b}{\Delta t + I}\right)$$

For the PID Conventional Cycle, f is equal to m, the manipulated variable. For the PID External Reset Feedback function, you supply f through a control on the user interface.

The PID Error Squared Cycle modifies step two to produce a nonlinear gain term in which the gain increases with the magnitude of the error:

$$m = b + e\left(\frac{100}{P}\right)\left(L + (1 - L)\frac{abs(e)}{100}\right)$$

where $e = SP - PV - K_d(PV - y)$ as in the normal proportional algorithms. If L is 1, the controller is linear. A value of 0.1 makes the minimum gain of the controller $\frac{10}{P}$.

To implement bumpless transfer from manual to automatic mode, a bias tracking technique eliminates proportional kick at transfer time. During manual mode, the function uses the following formula to calculate the bias.

$$b = m - \left(\frac{100}{P}\right)e$$

In effect, the automatic mode output (as a result of this bias shift) is always equal to the manual output. This method is effective for modest values of deviation, beyond which a proportional

kick occurs because the bias never winds up infinitely. At some point, the manually induced deviation can no longer be tracked by the limited bias. The alternative is to let the bias wind up, which can cause serious problems in normal operation.

Example Programs

Included with the LabWindows/CVI PID Control Toolkit are four example programs, `PIDDEMO`, `PIDDAQ`, `LDLGDEMO`, and `RAMPDEMO`. You can run these examples from the LabWindows/CVI environment.

PIDDEMO

`PIDDEMO` is a simulated water tank level control. It requires no plug-in boards or external hardware. It uses a single conventional PID loop to control the tank level. The PID tuning parameters, as well as the water tank simulator characteristics, are available on the user interface panel for modification at run time.

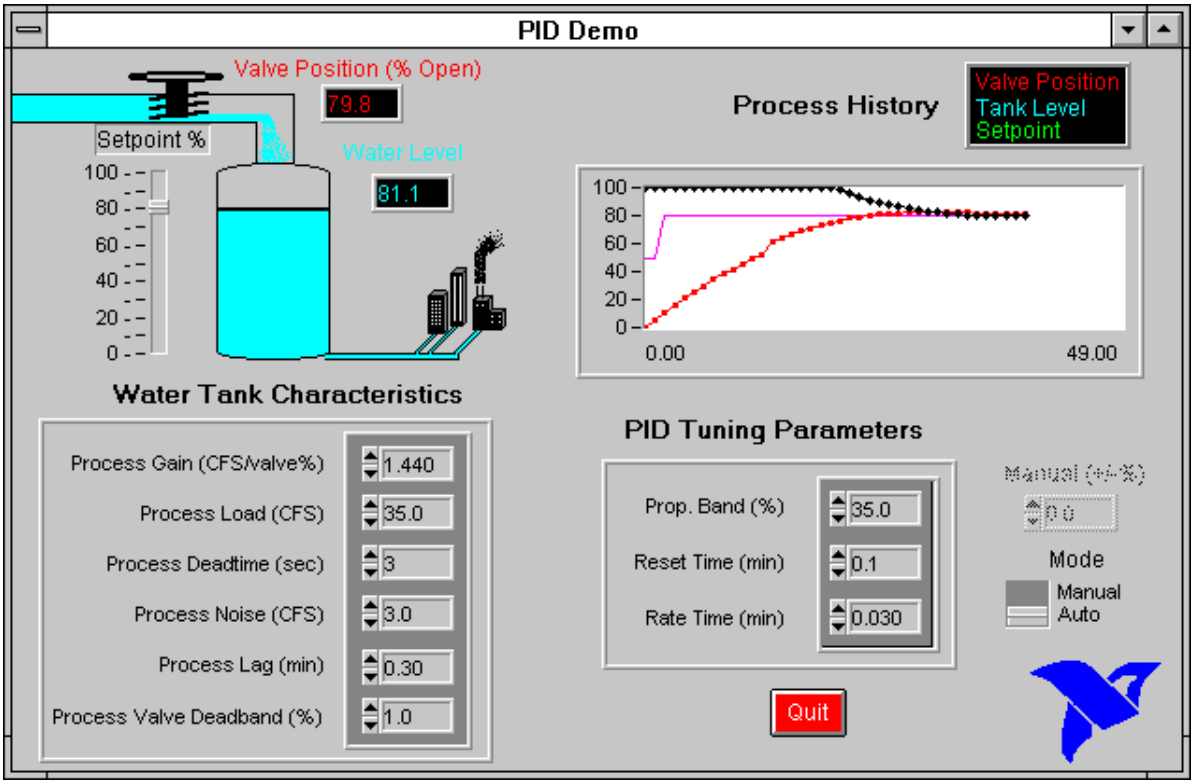

Figure 1-3. Front Panel of the Tank Level PID Demo

This example uses an integrating process with added noise, valve dead band, lag, and dead time. This simple example does not account for time; thus, it does not correct itself for loop cycle time. This example also demonstrates switching from automatic to manual mode.

PIDDAQ

`PIDDAQ` is a real controller for a resistor-capacitor network. It requires a National Instruments I/O board and the resistor-capacitor network detailed on the user interface panel. It uses a single conventional PID loop to control the output voltage of the resistor-capacitor network. The PID tuning parameters are available on the panel for modification at run time.

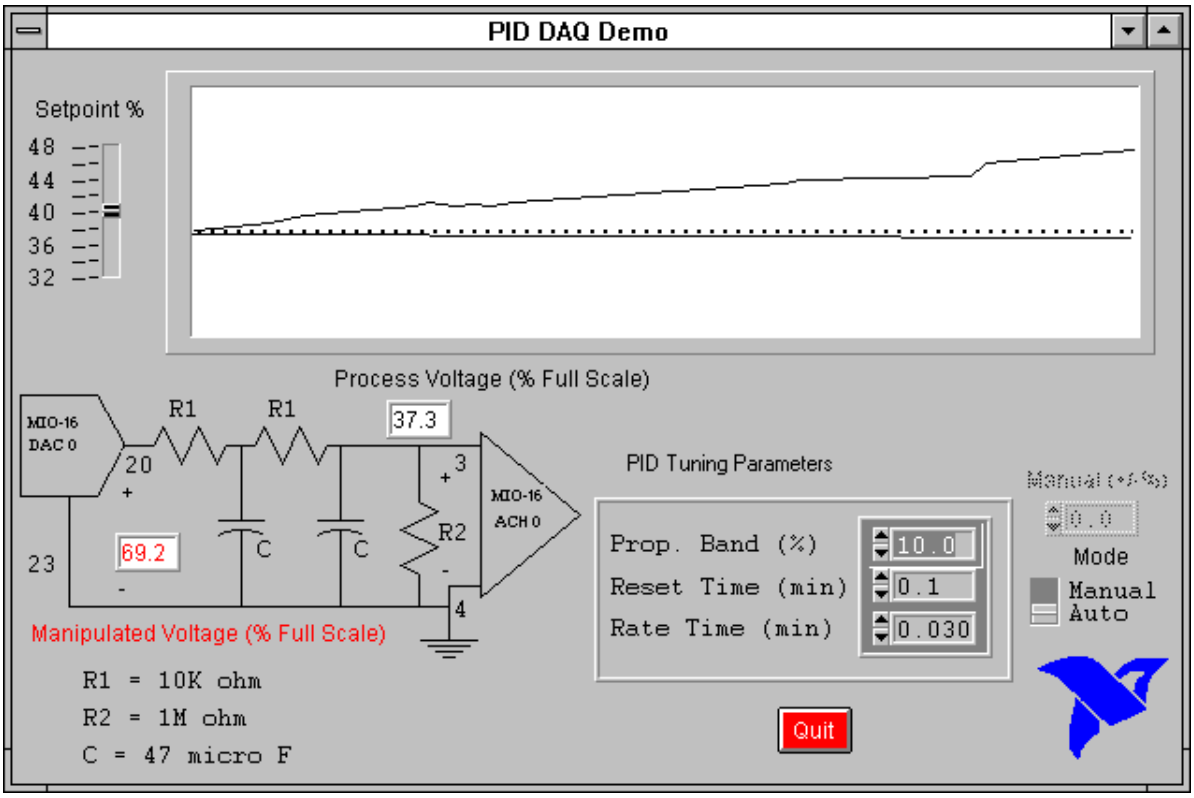

Figure 1-4. Front Panel of the Resistor-Capacitor Network Example

LDLGDEMO

`LDLGDEMO` demonstrates the Lead-Lag functions. It requires no plug-in boards or external hardware. Input for the Lead-Lag function is either a sine wave or a square wave. The waveform is synchronized to the Cycle Time chosen. Varying the tuning parameters demonstrates the time-domain response of the Lead-Lag functions. Notice that a large Lead

Time setting causes forceful ringing on the output, while a large Lag Time setting heavily filters the signal, almost making it disappear.

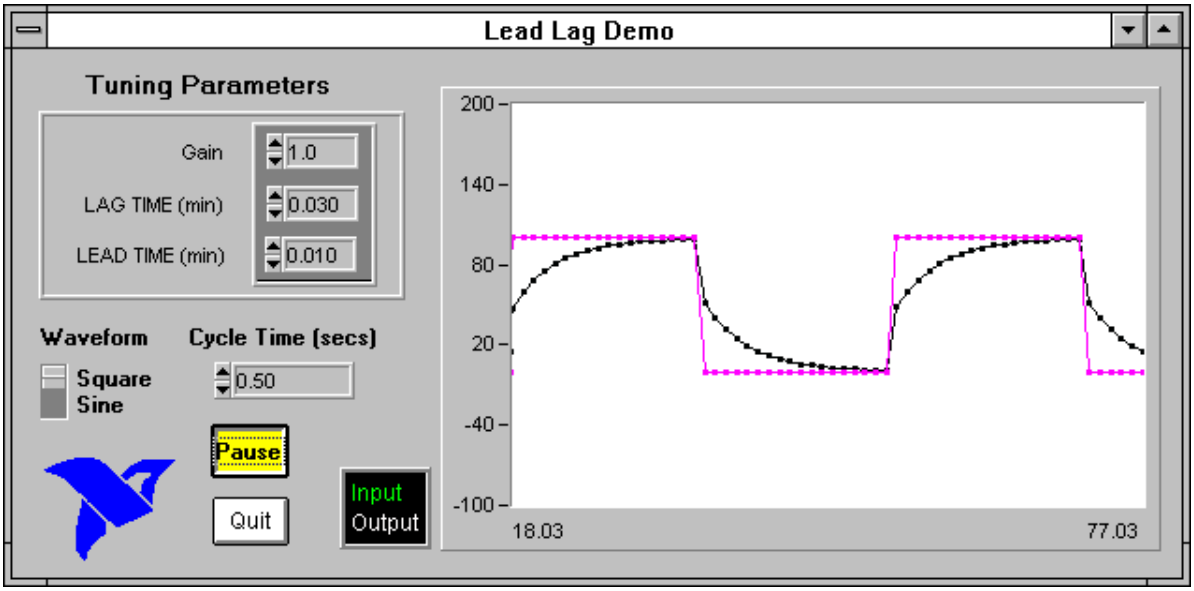

Figure 1-5. Front Panel of the Lead-Lag Demo

RAMPDEMO

RAMPDEMO is a demonstration of the ramp function. Notice that illogical input (where the setpoint is greater than initial output, but at a negative rate) results in no change to the output.

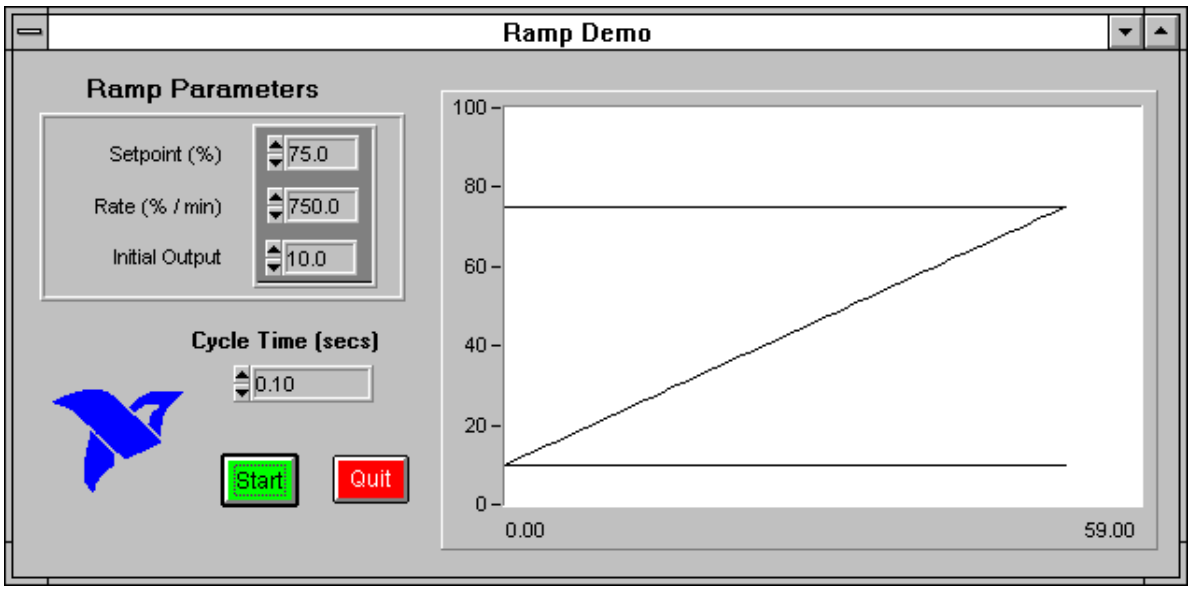

Figure 1-6. Front Panel of the Ramp Demo

Chapter 2
PID Control Function Reference

This chapter contains a brief explanation of each of the functions in the LabWindows/CVI PID Control Toolkit. The LabWindows/CVI PID Control functions are arranged alphabetically.

pid_config

`void` **pid_config (**`int` **LoopSelect,** `int` **Mode,** `double` **PropBand,** `double` **ResetTime,**
`double` **RateTime,** `int` **ReverseActing,** `double` **Setpoint,**
`double` **DerivGainLimit,** `double` **ManualSet)**

Purpose

Initializes the global variables of the control loop, and conveniently sets the initial setpoint, tuning parameters, control mode, and other parameters prior to operation. Before your program uses other PID functions, it must call `pid_config` for each loop your program uses.

Parameters

Input	**LoopSelect**	Integer	Selects which loop the configuration applies to
	Mode	Integer	Initial controller mode. manual=0; auto=1
	PropBand	Double-Precision	Proportional band, in percent. Controller gain is $\frac{100}{\textbf{PropBand}}$
	ResetTime	Double-Precision	Integral in minutes per reset. Set to zero to disable reset
	RateTime	Double-Precision	Rate in minutes per repeat. Set to zero to disable derivative action
Inputs (Cont'd)	**ReverseActing**	Integer	1 selects reverse (increase-decrease) action, the usual mode for controllers where the output goes down if the PV is greater than the setpoint
	Setpoint	Double-Precision	Controller setpoint, in percent
	DerivGainLimit	Double-Precision	Influences loop stability. Values between 10 and 20 are normal. Lower values (between 1 and 10) result in slightly less stable systems, as a rule
	ManualSet	Double-Precision	Manual setting, in percentage variation (plus or minus) from output value

pid_cycle

`double` **MV = pid_cycle (**`int` **LoopSelect,** `double` **PV,** `double` **CycleTime)**

Purpose

Given a value for the process variable (**PV**), calculates a new value for the manipulated variable (**MV**). This function should be called repeatedly in a loop (for example, in the main event loop of the application). `pid_cycle` gets its tuning parameters, setpoint, and other parameters from the global state of the loop. These parameters are set using other functions in the library such as `pid_tune` and `pid_setpoint`.

If the operating mode was previously set to manual through `pid_config` or `pid_mode`, then `pid_cycle` returns the output value that was set using `pid_config` or `pid_manualset`.

Parameters

Input	**LoopSelect**	Integer	Selects which loop the configuration applies to
	PV	Double-Precision	The value, as a percentage of the full range, of the measured process variable you are controlling
	CycleTime	Double-Precision	Time interval between calls to this function in seconds. Values less than or equal to zero force use of the internal timer

Return Value

MV	Double-Precision	The value, as a percentage of the full range, of the output of the control algorithm

---

pid_e2_cycle

`double` **MV = pid_e2_cycle (**`int` **LoopSelect,** `double` **PV,** `double` **Linearity)**

Purpose

Given a value for the process variable (**PV**), calculates a new value for the manipulated variable (**MV**). This function should be called repeatedly in a loop (for example, in the main event loop of the application). It performs similarly to `pid_cycle`, except for its nonlinear proportional error response. For some processes, increasing the controller gain as the error magnitude increases improves response time and damping.

`pid_e2_cycle` gets its tuning parameters, setpoint, and other parameters from the global state of the loop; these parameters are set using other functions in the library such as `pid_tune` and `pid_setpoint`.

If the operating mode was previously set to manual through `pid_config` or `pid_mode`, then `pid_e2_cycle` returns the output value that was set using `pid_config` or `pid_manualset`.

Parameters

Input	**LoopSelect**	Integer	Selects which loop the configuration applies to
	PV	Double-Precision	The value, as a percentage of the full range, of the measured process variable you are controlling
	Linearity	Double-Precision	If Linearity = 1, this function produces conventional linear response. A value of 0.1 is approximately parabolic (square-law) Range: 0.0 through 1.0
	Cycle Time	Double-Precision	Time interval between calls to this function in seconds. Values less than or equal to zero force use of the internal timer

Parameter Discussion

Linearity interacts strongly with the proportional band setting. If the gain is set too high, oscillation results when large deviations occur.

Return Value

MV	Double-Precision	The value, as a percentage of the full range, of the output of the control algorithm

pid_ext_cycle

`double` **MV** = **pid_ext_cycle (**`int` **LoopSelect,** `double` **PV,** `double` **Reset_Feedback,**
`double` **CycleTime)**

Purpose

Given a value for the process variable (**PV**), calculates a new value for the manipulated variable (**MV**). This function should be called repeatedly in a loop (for example, in the main event loop of the application). Use this control in schemes such as a selector (limit) control where two PID controllers switch off based upon some limiting value.

`pid_ext_cycle` gets its tuning parameters, setpoint, and other parameters from the global state of the loop; these parameters are set using other functions in the library such as `pid_tune` and `pid_setpoint`.

If the operating mode was previously set to manual through `pid_config` or `pid_mode`, then `pid_cycle` returns the output value that was set using `pid_config` or `pid_manualset`.

Parameters

Input	**LoopSelect**	Integer	Selects which loop the configuration applies to
	PV	Double-Precision	The value, as a percentage of the full range, of the measured process variable you are controlling
	Reset Feedback	Double-Precision	The reset feedback source. Range: 0.0 through 1.0
	CycleTime	Double-Precision	Time interval between calls to this function in seconds. Values less than or equal to zero force use of the internal timer

Return Value

MV	Double-Precision	The value, as a percentage of the full range, of the output of the control algorithm

pid_ld_lg_tune

`void` **pid_ld_lg_tune (**`int` **LoopSelect,** `double` **Gain,** `double` **LagTime,**
`double` **LeadTime)**

Purpose

Sets up new Lead-Lag tuning parameters: **Gain**, **LagTime**, **LeadTime**.

Parameters

Input	**LoopSelect**	Integer	Selects which loop the operation applies to
	Gain	Double-Precision	Gain
	LagTime	Double-Precision	Lag time in minutes. Zero turns lag time off
	LeadTime	Double-Precision	Lead time in minutes. Zero turns lead time off

---

pid_ld_lg_cycle

`double` **Result** = **pid_ld_lg_cycle (**`int` **LoopSelect,** `double` **Input,** `double` **CycleTime)**

Purpose

Calculates the dynamic compensator in feed-forward control schemes. This function is called repeatedly in a loop (for example, in the main event loop of the application). Lead Lag Cycle gets its tuning parameters, gain, lead time and lag time from the global state of the loop; these parameters are set using the library function `pid_ld_lg_tune`.

Parameters

Input	**LoopSelect**	Integer	Selects which loop the operation applies to
	Input	Double-Precision	Input in percent
	CycleTime	Double-Precision	Time interval between calls to this function in seconds. Values less than or equal to zero force use of the internal timer

Return Value

Result	Double-Precision	Output of the Lead-Lag algorithm in percent

---

pid_manualset

`void` **pid_manualset (**`int` **LoopSelect,** `double` **ManualSet)**

Purpose

Sets the manual output value (zero to 100 percent) for the selected loop. This setting is relative to the output at the time that the loop was placed in manual mode.

Parameters

Input	**LoopSelect**	Integer	Selects which loop the operation applies to
	ManualSet	Double-Precision	Manual setting, in percentage variation (positive or negative) from output value

---

pid_mode

`void` **pid_mode (**`int` **LoopSelect,** `int` **Mode)**

Purpose

Changes between manual and automatic control mode. Transfers between control modes are bumpless.

Parameters

Input	**LoopSelect**	Integer	Selects which loop the operation applies to
	Mode	Integer	Manual or auto controller mode. 0 = manual 1 = auto (default)

---

pid_ramp

`double` **Result** = **pid_ramp (**`int` **LoopSelect,** `int` **Run,** `double` **Setpoint, Rate,**
`double` **CycleTime,** `int` **Initialize,** `double` **InitialOutput)**

Purpose

Generates a setpoint ramp.

Parameters

Input	**LoopSelect**	Integer	Selects which loop the operation applies to
	Run	Integer	Determines whether the ramp is executed
	Setpoint	Double-Precision	Desired value for output variable in percent. Output will not overshoot setpoint
	Rate	Double-Precision	Ramp slope in percent per minute. Sign determines polarity of ramp

(continues)

Input (Cont'd)	**CycleTime**	Double-Precision	Time interval between calls to the ramp function in seconds. This value must be supplied. Control calibration depends on this value
	Initialize	Integer	Determines whether to force Output to **InitialOutput**
	Initial Output	Double-Precision	The value (in percent) returned as Output when **Initialize** is TRUE

Return Value

Result	Double-Precision	Ramps linearly toward the setpoint at a percent-per-minute rate

---

pid_setpoint

`void` **pid_setpoint (**`int` **LoopSelect,** `double` **Setpoint)**

Purpose
Changes the setpoint of the specified PID loop. Takes a value between 0.0 and 100.0 percent.

Parameters

Input	**LoopSelect**	Integer	Selects which loop the operation applies to
	Setpoint	Double-Precision	Controller setpoint, in percent

---

pid_tune

`void` **pid_tune (**`int` **LoopSelect,** `double` **PropBand** `double` **ResetTime,**
`double` **RateTime)**

Purpose

Sets new PID tuning parameters: proportional band, rate time, and reset time.

Parameters

Input	**LoopSelect**	Integer	Selects which loop the operation applies to
	PropBand	Double-Precision	Proportional band, in percent. Controller gain is $\frac{1}{\textbf{PropBand}}$
	ResetTime	Double-Precision	Integral in minutes per reset. Set to zero to disable reset
	RateTime	Double-Precision	Rate in minutes per repeat. Set to zero to disable derivative action. If the gain is set too high, oscillation results when large deviations occur

Appendix A
Customer Communication

For your convenience, this appendix contains forms to help you gather the information necessary to help us solve technical problems you might have as well as a form you can use to comment on the product documentation. Filling out a copy of the *Technical Support Form* before contacting National Instruments helps us help you better and faster.

National Instruments provides comprehensive technical assistance around the world. In the U.S. and Canada, applications engineers are available Monday through Friday from 8:00 a.m. to 6:00 p.m. (central time). In other countries, contact the nearest branch office. You may fax questions to us at any time.

Corporate Headquarters
(512) 795-8248
Technical support fax: (800) 328-2203
(512) 794-5678

Branch Offices	**Phone Number**	**Fax Number**
Australia	(03) 879 9422	(03) 879 9179
Austria	(0662) 435986	(0662) 437010-19
Belgium	02/757.00.20	02/757.03.11
Denmark	45 76 26 00	45 76 71 11
Finland	(90) 527 2321	(90) 502 2930
France	(1) 48 14 24 00	(1) 48 14 24 14
Germany	089/741 31 30	089/714 60 35
Italy	02/48301892	02/48301915
Japan	(03) 3788-1921	(03) 3788-1923
Netherlands	03480-33466	03480-30673
Norway	32-848400	32-848600
Spain	(91) 640 0085	(91) 640 0533
Sweden	08-730 49 70	08-730 43 70
Switzerland	056/20 51 51	056/20 51 55
U.K.	0635 523545	0635 523154

Technical Support Form

Photocopy this form and update it each time you make changes to your software or hardware, and use the completed copy of this form as a reference for your current configuration. Completing this form accurately before contacting National Instruments for technical support helps our applications engineers answer your questions more efficiently.

If you are using any National Instruments hardware or software products related to this problem, include the configuration forms from their user manuals. Include additional pages if necessary.

Name _____

Company _____

Address _____

_____

Fax (___)_____ Phone (___)_____

Computer brand _____ Model _____ Processor _____

Operating system _____

Speed _____MHz RAM _____MB Display adapter _____

Mouse _____yes _____no Other adapters installed _____

Hard disk capacity _____MB Brand _____

Instruments used _____

National Instruments hardware product model _____ Revision _____

Configuration _____

National Instruments software product _____ Version _____

Configuration _____

The problem is _____

_____

_____

_____

_____

List any error messages _____

_____

_____

_____

_____

The following steps will reproduce the problem _____

_____

_____

Documentation Comment Form

National Instruments encourages you to comment on the documentation supplied with our products. This information helps us provide quality products to meet your needs.

Title: **LabWindows®/CVI PID Control Toolkit Reference Manual**

Edition Date: **October 1994**

Part Number: **320794A-01**

Please comment on the completeness, clarity, and organization of the manual.

If you find errors in the manual, please record the page numbers and describe the errors.

Thank you for your help.

Name _____

Title _____

Company _____

Address _____

_____

Phone (_____) _____

Mail to: Technical Publications
National Instruments Corporation
6504 Bridge Point Parkway, MS 53-02
Austin, TX 78730-5039

Fax to: Technical Publications
National Instruments Corporation
MS 53-02
(512) 794-5678

Glossary

Prefix	Meaning	Value
n-	nano-	10^{-9}
µ-	micro-	10^{-6}
m-	milli-	10^{-3}
k-	kilo-	10^{3}

Symbols

°	Degrees.
∞	Infinity.
Ω	Ohms.
%	Percent.

A

A	Amperes.
anti-reset windup	A method that prevents the integral term of the PID algorithm from moving too far beyond saturation when an error persists.

B

bias	The offset added to a controller's output.
bumpless	The output from a PID controller remains at the current value when the control mode is switched from auto to manual or from manual to auto.

C

C	Celsius.
cascade control	Control in which the output of one controller is the set point for another controller.

closed loop — A signal path which includes a forward path, a feedback path, and a summing point, and which forms a closed circuit. Also called a *feedback loop*.

controller output — *See* manipulated variable.

D

damping — The progressive reduction or suppression of oscillation in a device or system.

DC — Direct current.

dead time (T_d) — The interval of time (expressed in minutes) between initiation of an input change or stimulus and the start of the resulting observable response.

derivative (control) action — Control response to the time rate of change of a variable. Also called *rate action*.

deviation — Any departure from a desired value or expected value or pattern.

downstream loop — In a cascade, the controller whose setpoint is provided by another controller.

E

EGU — Engineering units.

F

FC — Flow controller.

feedback control — Control in which a measured variable is compared to its desired value to produce an actuating error signal that is acted upon in such a way as to reduce the magnitude of the error.

feedback loop — *See* closed loop.

G

gain — For a linear system or element, the ratio of the magnitude (amplitude) of a steady-state sinusoidal output relative to the causal input; the length of a phasor from the origin to a point of the transfer locus in a complex plane. Also called the *magnitude ratio*.

General Purpose Interface Bus	*See* GPIB.
GPIB	GPIB (General Purpose Interface Bus) is the common name for the communications interface system defined in ANSI/IEEE Standard 488.1-1987 and ANSI/IEEE Standard 488.2-1987. Hewlett-Packard, the inventor of the bus, calls it the HP-IB.

H

Hz	Hertz.

I

Instrument Society of America (ISA)	The organization that sets standards for process control instrumentation in the United States.
integral action rate	*See* reset rate.
integral (control) action	Control action in which the output is proportional to the time integral of the input. That is, the rate of change of output is proportional to the input.
interacting PID algorithm	Control algorithm in which the integral and derivative actions depend upon one another.
I/O	Input/output.
ISA	*See* Instrument Society of America.

K

K	*See* process gain.

L

lag	A lowpass filter or integrating response with respect to time.
loop cycle time	Time interval between calls to a control algorithm.

M

magnitude ratio	*See* gain.
manipulated variable (MV)	A quantity or condition that is varied as a function of the actuating error signal so as to change the value of the directly controlled variable. Also called *controller output*.
MB	Megabytes of memory.
ms	Milliseconds.

N

noise	In process instrumentation, an unwanted component of a signal or variable. Noise may be expressed in units of the output or in percent of output span.

O

output limiting	Preventing a controller's output from traveling beyond a desired maximum range.
overshoot	The maximum excursion beyond the final steady-state value of output as the result of an input change. Also called *transient overshoot*.

P

P	Proportional.
PB	*See* proportional band.
PC	Pressure controller.
P (proportional) controller	A controller which produces proportional control action only; that is, a controller that has only a simple gain response.
PD (proportional derivative) controller	A controller that produces proportional plus derivative (rate) control action.
PI (proportional integral) controller	A controller that produces proportional plus integral (reset) control action.

PID (proportional integral derivative) controller	A controller that produces proportional plus integral (reset) plus derivative (rate) control action.
process gain (K)	For a linear process, the ratio of the magnitudes of the measured process response to that of the manipulated variable.
process variable (PV)	The measured variable (such as pressure or temperature) in a process to be controlled.
proportional band (PB)	The change in input required to produce a full range change in output due to proportional control action.
proportional kick	The response of a proportional controller to a step change in the setpoint or process variable.
PV	*See* process variable.

Q

Quarter Decay Ratio	A response in which the amplitude of each oscillation is one-quarter that of the previous oscillation.

R

ramp	The total (transient plus steady-state) time response resulting from a sudden increase in the rate of change from zero to some finite value of the input stimulus. Also called *ramp response*.
rate action	*See* derivative control action.
reset rate	• Of proportional plus integral or proportional plus integral plus derivative control action devices: for a step input, the ratio of the initial rate of change of output due to integral control action to the change in steady-state output due to proportional control action. • Of integral control action devices: for a step input, the ratio of the initial rate of change of output to the input change. • Also called integral action rate.
reverse acting (increase-decrease) controller	A controller in which the value of the output signal decreases as the value of the input (measured variable) increases.
RPM	Revolutions per minute.

S

s	Seconds.
saturation	Full scale, or maximum value.
scope chart	Chart indicator modeled on the operation of an oscilloscope.
selector control	The use of multiple controllers and/or multiple process variables in which the connections may change dynamically depending upon process conditions.
set point (SP)	An input variable which sets the desired value of the controlled variable.
span	The algebraic difference between the upper and lower range values.
strip chart	A plotting indicator modeled after a paper strip chart recorder, which scrolls as it plots data.

T

time constant (T)	In process instrumentation, the value T (in minutes) in an exponential response term, $Ae^{\left(\frac{-t}{T}\right)}$, or in one of the transform factors, such as 1 + sT.
transient overshoot	*See* overshoot.

V

V	Volts.
valve dead band	In process instrumentation, the range through which an input signal may be varied, upon reversal of direction, without initiating an observable change in output signal.

W

while loop	Post-iterative-test loop structure that repeats a section of code until a condition is met.
wind up	A condition in which the integral term of the PID algorithm moves too far beyond saturation when an error persists.